



BosStrap One Piece and One Piece LT Installation and Fitting Instructions

Initial Fit Adjustment of the BosStrap One Piece Sling Strap

BosStrap One Piece Straps should be approximately adjusted to fit you before the Tail is attached to the camera. Begin by opening the BosStrap to a larger than needed loop. Put your head and right arm through the BosStrap. The BosStrap should be over your left shoulder, across your chest under your right arm with the nylon fittings at your back and the logo in front. Leave the free end of the strap in back dangling down until the final adjustment is made. The BosStrap is on correctly when the BosStrap logo on the front is properly oriented as shown in the photograph at right. The BosStrap length should be adjusted so that the bottom of the metal slide plate is at your right side, a few inches above your hip. Final adjustments will be made after the camera is attached.



Now, remove the BosStrap One Piece Sling and attach the camera to the One Piece Tail.

Attaching the One Piece Tail to your Camera

1. The photo at right shows the metal slide plate on the BosStrap with the OP Tail. The $\frac{3}{8}$ " OP Tail has a small nylon camera sliplock. One end of the OP Tail is permanently sewn to the metal slide plate. The other end is called the free end.



2. Work the free end from the $\frac{3}{8}$ " sliplock so that only one pass of the webbing remains in the sliplock. (left)

3. Insert the free end through the left strap lug (or triangular split ring) from the top on the camera body as shown in the photo at right. (Left lug is on side opposite shutter release.) Work the free end back through the sliplock from below, keep the webbing loose. **Important Note: the sliplock is oriented correctly when the webbing does not cover the molded circle on the underside of the sliplock.**



4. Continue threading the free end back through the sliplock so that it looks like the photo at right. There should be at least 1/2" of free end extending beyond the 3/8" slip-lock. When adjusting the OP Tail, it helps to keep the webbing loose as shown in the photo.



5. Once threaded, snug up the webbing by firmly tugging on the metal slide plate while holding the camera body to insure that all is secure.

Final Adjustments

Now, put on the BosStrap OP with the camera and lens attached and adjust the BosStrap so that the camera is at a comfortable location by your right hip and your hand falls naturally on where you grip the camera. You should not have to stretch to reach the camera. You can adjust the BosStrap and the BosTail length as needed. Small adjustments to the Tail length and BosStrap can make big differences in comfort. After you fine tune the fit, extra BosStrap slack beyond the buckle can be neatly secured with the included triglide.

When the camera is not in use, resting at your hip, turn it so the lens points down and backward. This position will result in minimal camera movement when walking because the camera will be at your leg pivot point and the curve of your hip will fit between the top of the lens and front of the camera body or pentaprism.

Stowing your Camera

The BosStrap One Piece Sliding Sling Strap does not need to be removed from the camera when stowing it. Simply wrap the BosStrap around the lens or camera body and put it in your camera bag.

