

BosSTRAP

BosTail

Attach your sling strap's carabiner to the BosTail ring. Replaces your Tripod Fitting



Attaching the BosTail to Camera Body

1. One end of the BosTail has a nickel plated ring sewn in place. The other end is called the free end. Remove the nylon sliplock from the BosTail.



2. Work the free end from the sliplock so that only one pass of the webbing remains in the sliplock.



3. Insert the free end through the top of a strap lug or split ring on the camera body. **Do not attach anywhere else.**



4. Work the free end back up through the sliplock, while keeping the webbing loose.



Note: The molded circle on the underside of the sliplock must be visible.

5. Leave at least 1/2" of free end extending out beyond the sliplock. When adjusting the BosTail, it helps to keep the webbing loose as shown in the photo. Position the sliplock about 1/2" from the camera lug.



6. Snug up the webbing. Firmly tug the ring while holding the camera body to insure that all is secure.



When you first attach the BosTail to your camera, make the BosTail as long as you can. It is easier to shorten a fitted BosTail than to lengthen it.

The BosTail can be adjusted from approximately 2" to 4" long.

- Allows your tripod socket to be used for a tripod plate or L-bracket.
- Never again remove your tripod plate.
- Fastest way to connect to a tripod.
- Will fit most cameras with a 3/8" strap.
- Helps prevent camera damage.
- Safer way to carry your camera.
- Tested to carry 60 pounds.

Disclaimer

Exercise care when using any camera support system. The user is ultimately responsible to insure that his equipment is safely secured. *BosStrap LLC* shall not be held responsible for direct or consequential damage to the user's equipment or other incidental damage or losses resulting from the use of any *BosStrap* product.



Made in USA

