

Generation 3 Tail / Ultra Light Hand Band

The Generation 3 Tail / Ultra Light Hand Band (G3 Tail/ULHB) can be used in two ways.

Generation 3 Tail

The G3 Tail attaches to any standard 3/8" camera strap lug or strap ring. The cam buckle and safety sleeve insure that your camera can not be accidentally detached from the sling strap, but can easily, intentionally be detached from the sling strap when you want. There are no metal parts in the G3 Tail that could scratch your camera body or the LCD.



Ultra Light Hand Band



The BosStrap G3 Tail can be configured as an Ultra Light Hand Band (ULHB) as shown in the photo at left. The ULHB attaches to the right camera strap lug and does not use the tripod socket which remains available. The ULHB loop is fully adjustable for bare hands or thick gloves. In use, four fingers go through the loop; your thumb does not. The BosStrap Ultra Light Hand Band provides an amazing amount of security without interfering with the camera controls, battery/memory/connector access doors or the tripod socket. The ULHB can be used with DSLRs and is especially useful on smaller cameras to improve your grip.

G3 Tail Installation

1. **Open the G3 Tail by sliding the safety vinyl sleeve off the cam buckle and lifting the cam buckle lever. Leave the 3/8" strap keeper on the G3 Tail.**



2. **Slide the free end of the G3 Tail down through the camera strap lug (or strap ring). Thread the free end back through the strap keeper.**



3. Position the cam buckle about 2" from the camera strap lug. Push the small nylon strap keeper near the camera lug. Insert the free end of the strap through the metal slide on the sling strap and under the open cam buckle lever. Lock down the cam buckle lever.



4. Push the safety vinyl sleeve back partially covering the closed cam buckle. The vinyl sleeve only needs to cover the end of the closed cam buckle lever.



Ultra Light Hand Band Installation

1. Disassemble the G3 Tail as Step 1 above.
2. Slide the free end of the G3 Tail up through the camera strap lug (or strap ring). Loop the free end back under the cam buckle lever. Adjust the loop to fit loosely over four fingers. Lock down the cam buckle lever. Check the fit. Adjust if necessary.
3. Push the vinyl sleeve partially back over the closed cam buckle. The vinyl sleeve only needs to cover the end of the closed cam buckle lever. Excess strap length is threaded through the strap keeper.



BosG3T