





# BosStrap Side Slide™ Instructions



Front View

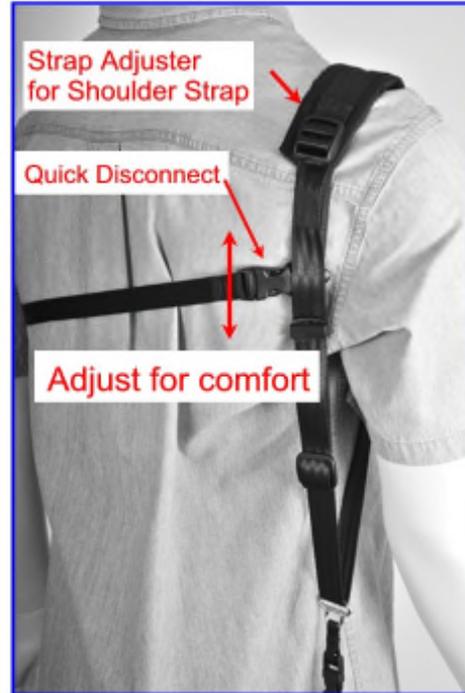

Rear View

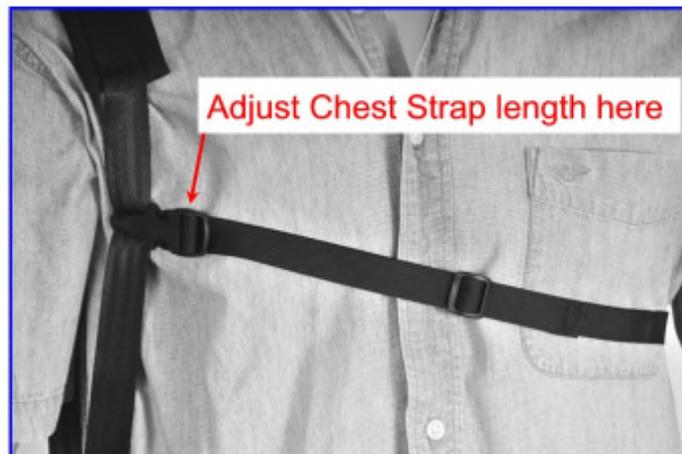

Strap can be worn on left or right shoulder. To use on left shoulder remove both Quick Disconnects and reinstall in opposite direction. (See Page 6.)

Strap Adjuster remains in back for left or right shoulder use.

*Please read these instructions before beginning.*

The *correct* way to use a BosStrap Side Slide is the *comfortable* way! Personal preference depends on your shooting style. These instruction provide only a starting point for setting up the Side Slide.

The BosStrap Side Slide is factory configured for use on the right shoulder. For use on the left shoulder, simply reverse the direction of the two Slide Disconnects (see Page 3 and Page 6). Whether the right or left shoulder is used, the Strap adjuster on the shoulder pad should always be at the back of the Shoulder Pad. These instructions assume that you will use the BosStrap Side Slide on the right shoulder. They will apply for use on the left shoulder as well once the Slide Disconnects are reversed.

*Refer to the BosStrap Side Slide Part Names on the next page.*

1. We recommend that when using the Side Slide on the right shoulder, start by removing the female side of the Two-Piece Camera Tail with Side Release. Connect the female half of the Side Release to the right camera strap lug (see Page 4). If you use the Side Slide on your left shoulder, connect the female half to the left camera strap lug.

2. Put the Side Slide on your shoulder, center the shoulder pad, and connect the female side of the Two-Piece Camera Tail to its male mate on the shoulder strap. Using the Strap Adjuster at the rear of the shoulder pad, adjust the length of the shoulder strap until the camera is conveniently at hand when resting at your side.

3. The chest strap has a male Quick Disconnect sewn on one end. Connect this to the Slide Disconnect female mate on the rear of shoulder strap, located below the shoulder pad.

4. Bring the chest strap around your torso and plug the Quick Disconnect Male Adjuster into the mate on the Slide Disconnect Female mate at the front of the shoulder strap.

5. Adjust the length of the chest strap for a fit that is comfortable but does not allow the shoulder pad with camera attached to slip off the shoulder.

6. Both front and rear Slide Disconnects can be slid up or down for optimum comfort. Once the straps are adjusted, there may be excess shoulder strap length which will be contained as described on Page 5.



# BosStrap Side Slide

## Part Names

Shoulder Strap Adjuster  
(at back of pad, not shown)

(Transparent Torso)

Slide Disconnect (Female)

Shoulder Strap

Strap End Keeper

Triglode Keeper

Metal Slider

Two-Piece Camera  
Tail with Side Release  
Disconnect

Shoulder Pad

Quick Disconnect  
(Male, Sewn End - Back)

Triglode Keeper

Chest Strap

Quick Disconnect (Male)  
with Adjuster (front only)

Slide Disconnect (Female)

Key:


Chest Strap Parts in Red

Shoulder Strap Parts in Blue

Drawing courtesy of Assabet Valley Technical High School, Hudson, MA. Graphics Art Department

## Attaching the BosStrap™ Side Slide Camera Tail

The BosStrap Side Slide Camera Tail is a two-piece strap that uses a Side Release Quick Disconnect to separate the camera from the strap. The female side of the Quick Disconnect is attached to and remains with the camera. The following photos show how to attach the female side of the Quick Disconnect to the camera.

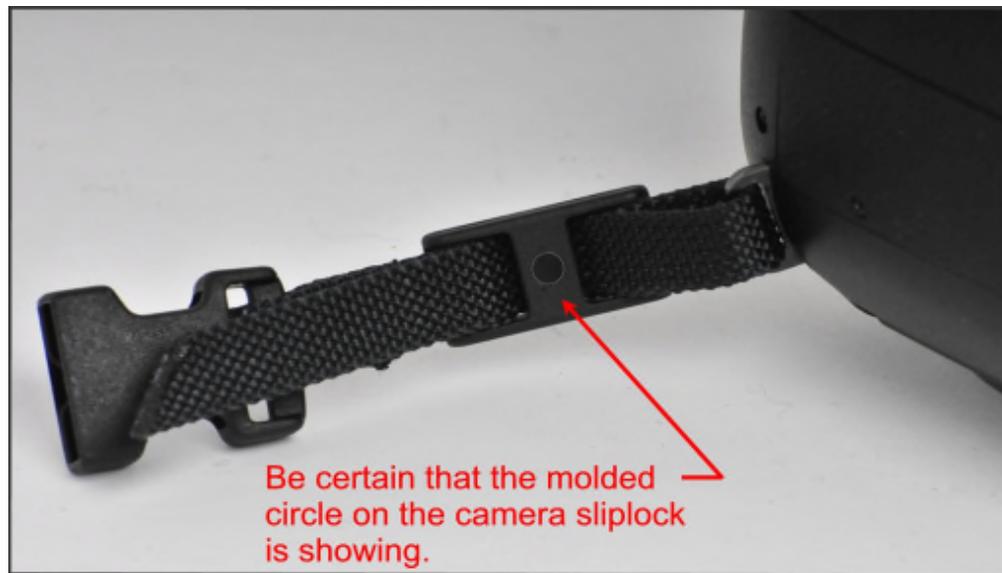

# BosStrap Side Slide™

## Storing Excess Strap

If you have excess strap length after adjusting your camera for easy access at your side, take the free end of the strap and thread it back through the rear TriGlide Keeper as shown in the middle photo. Pull up the excess and secure it under the Strap End Keeper as shown in the third photo.



# BosStrap Side Slide™

## Converting the Side Slide for the Other Shoulder



The BosStrap Side Slide is set at the factory for right shoulder use. If you want to use the Side Slide on your left shoulder, the two Slide Disconnects on the Shoulder Strap (front and back) must be reoriented to point in a direction opposite to the shoulder that the Side Slide is worn on. It is not necessary to take the strap apart to remove the Slide Disconnects. The Slide Disconnects are slotted so that the Shoulder Strap can be removed from them.

To remove the Slide Disconnects, first pull some of the strap so that a loose loop is formed as shown above. Then, work one side of the strap out from under the slot. Repeat for the other slot. Move both Slide Disconnects so that the end on each is oriented in the opposite direction. Reinstall on the Shoulder Strap.

Tip: The key to easily removing the Quick Disconnects is to create a loose loop of webbing at the fitting before attempting to slip the webbing from the slot in the fitting.