


BosStrap Generation 3 Tail and Ultra Light Hand Band Installation Instructions using a Sliplock® Fitting

Generation 3 Tail Installation

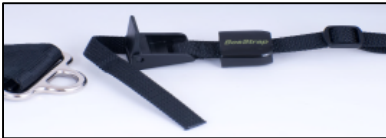

1. The G3 Tail as Shipped.
2. Pull the vinyl sleeve back to access the cam lock.
3. Open the cam lock and release the G3 Tail from the metal slide.
4. Remove the small triglide on the G3 Tail. Leave the vinyl sleeve on the G3 Tail
5. Rethread the end of the G3 Tail through the triglide.
6. Thread the G3 Tail through the left camera strap lug from top.
7. Continue threading the G3 Tail back through the small triglide.
8. Insert the G3 Tail through the metal slider.
9. Thread at least 2" of the G3 Tail under the cam lock.
10. Snap the cam lock closed.
11. Push the vinyl sleeve on the cam lock to secure the cam lever.



6



7



8



9



10



11

Ultra Light Hand Band Installation



1. Disassemble the G3 Tail as shown in 4 above.
2. Install the small triglide as in 5 above.
3. Thread the free end of the Ultra Light Hand Band through the *right* camera strap lug or triangular split ring from below.
4. After fitting to your hand, secure the end in the cam buckle as in 9-11 above.
5. Thread the excess length through the small triglide. In use, only four fingers go through the ULHB.

